

## TEGO® Care PBS 6

Versatile PEG-free O/W emulsifier for challenging fluid emulsions

- Especially suitable for formulating low-viscous lotions and sprays
- Gives outstanding formulation flexibility with regard to high amounts of water soluble UV filters or other difficult to stabilize ingredients
- Forms stable emulsions between pH 4.0 and 8.5
- Provides moisturization properties
- Fully based on renewable sources
- ECOCERT, NATRUE and COSMOS certified

Personal Care

## INCI Name (PCPC Name)

Polyglyceryl-6 Stearate (and) Polyglyceryl-6 Behenate

### Chemical and physical properties (not part of specifications)

Form	pellets
HLB value	approx. 13

### Properties


TEGO® Care PBS 6 is a non-ionic, O/W PEG-free emulsifier that is completely based on renewable raw materials. TEGO® Care PBS 6 is based on glycerol, stearic acid and behenic acid. In a first step, a polycondensation reaction of glycerol is carried out. The obtained polyglycerol is subsequently esterified with stearic acid and behenic acid.

- TEGO® Care PBS 6 provides excellent stabilization for all types of O/W lotions and sprays, especially for low-viscous ones.
- TEGO® Care PBS 6 is recommended for the formulation of sun care lotions and sprays as it provides extraordinary stable systems with high amounts of water soluble UV filters especially in combination with insect repellents.
- Difficult to stabilize ingredients like electrolytes and high amounts of urea or ethanol are well tolerated by emulsions based on TEGO® Care PBS 6.
- TEGO® Care PBS 6 is suitable for the formulation of O/W emulsions with all types of cosmetic oils at a pH of 4.0 to 8.5.
- TEGO® Care PBS 6 is suitable for systems preserved with natural preservatives such as organic acids (e. g. Benzoic Acid and Sorbic Acid).
- The recommended usage concentration of TEGO® Care PBS 6 is approx. 2.5 to 4.0% in lotions and sprays.
- Typical oil phase contents of emulsions based on TEGO® Care PBS 6 are 10 – 30% for lotions and 10 – 20% for sprays.
- Typical combinations for O/W lotions are 2.5 – 4.0% TEGO® Care PBS 6 with up to 3.0% consistency enhancers. Suitable combinations include TEGIN® M Pellets (Glyceryl Stearate) and TEGO® Alkanol 18 (Stearyl Alcohol) or TEGO® Alkanol 1618 (Cetearyl Alcohol) in a ratio of 50:50. In addition, 0.1 – 0.3% of Carbomer (e.g. TEGO® Carbomer 341 ER) or 0.2 – 0.5% of Xanthan Gum are recommended.

- In O/W sprays, 0.5 – 1.2% of above mentioned consistency enhancer combination are sufficient for emulsion stabilization together with 2.5 – 4.0% of TEGO® Care PBS 6 and 0.1 – 0.2% of Carbomer (e.g. TEGO® Carbomer 341 ER) or 0.1 – 0.5% of Xanthan Gum.
- As TEGO® Care PBS 6 is able to stabilize electrolyte containing emulsions, the incorporated polymeric thickeners should preferably be resistant to significant electrolyte contents. Therefore, hydrophobically modified Carbomers like TEGO® Carbomer 341 ER or Xanthan Gum types are preferred compared to classical polyacrylate-based thickeners.
- Although TEGO® Care PBS 6 is recommended for the formulation of lotions and sprays, it can also be used for stabilizing creams. In this case, 2.5 – 4.0% emulsifier, 1.5 – 2.5% consistency enhancers and 0.1 – 0.2% Carbomer or 0.8 – 1.0% Xanthan Gum are typical use levels.
- The pelletized product TEGO® Care PBS 6 may tend to agglomerate under elevated temperatures during storage. This effect is not affecting the application properties of the emulsifier. If agglomeration has occurred, manually reduce the lumps to smaller pieces and add them to the oil phase for melting and subsequent standard processing procedure.

### *In vivo* moisturization study

Based on polyglycerol, TEGO® Care PBS 6 enhances the skin moisturization properties of cosmetic formulations.

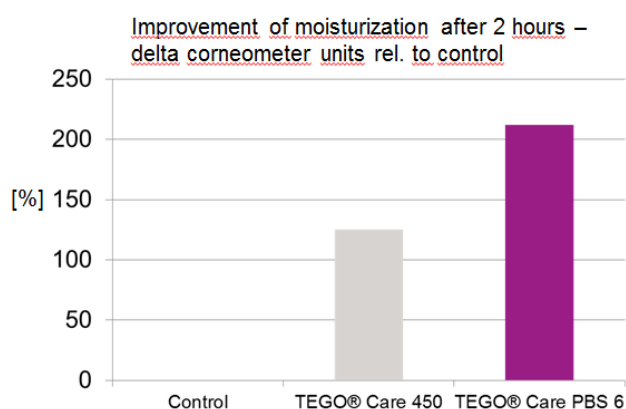

**Fig. 1:** Test results of *in vivo* short term moisturization study. Test parameters: test formulations: control (untreated skin), O/W sun care emulsions with different emulsifiers; number of panelists: 16; test area: inner forearm; size of test area: 5 cm<sup>2</sup>; amount of test formulation: 20 µg; measurement device: Corneometer CM 825; measurement time points: start, 2h after appl..

Figure 1 shows the relative increase of skin moisturization two hours after application of the formulation based on TEGO® Care PBS 6 in comparison to the emulsion based on TEGO® Care 450 and to control.

### Preparation

For the preparation of sprays, lotions and creams, the oil and water phases should be heated separately to 70 – 80 °C. It is suggested to add the hot oil phase to the hot water phase **while stirring**. The coarsely dispersed pre-emulsion is then homogenized.

If the above mentioned processing is not possible, the hot water phase should be added to the hot oil phase **without stirring** (to avoid the building of the water-in-oil form) and start afterwards with the homogenization. During the homogenization process the homogenizer must be placed in the water phase to ensure that the oil phase will be incorporated into the water phase.

Besides above favourable preparation procedures, in some cases the so-called “inverse” processing – addition of the hot water phase into the hot oil phase while stirring – can be used (see also guideline formulation H 3/12-8). The applicability of this method is strongly dependant on the respective formula, especially on the polarity of the used emollients and cannot be guaranteed for all systems. Typically, polar emollients are more suitable for inverse processing. Thus, this type of processing has to be tested in each case. Incompatible formulas tend to form a W/O emulsion during water addition (recognizable by high viscosity). When cooling down, this emulsion converts to an unstable oil-in-water emulsion with large particle size.

During cooling, a constant horizontal and vertical movement of the emulsion has to be ensured. The viscosity of the liquid emulsion increases in dependence of the amounts of consistency enhancers, as these components solidify.

It is recommended that thickeners, such as electrolyte tolerant, alkyl modified Carbomers, are dispersed in oil and then added to the emulsion.

The dispersion TEGO® Carbomer 341 ER in oil (e. g. in mineral oil, ethylhexyl stearate; not in triglycerides) is added at 60 °C. Then, the emulsion is homogenized again. Alternatively, polyacrylate based thickeners can also be incorporated via dissolving them in the hot water phase.

In order to avoid a negative impact on the lamellar structures formed by the emulsifier and consistency enhancers, it is recommended to add Xanthan Gum below 40 °C to the emulsions.

Perfume, temperature-sensitive substances or electrolyte-containing ingredients are preferably added at 35 – 40 °C. Phenoxyethanol-containing preservatives should be incorporated at this temperature, as well. Since phenoxyethanol is an amphiphilic molecule it can interfere with the emulsification process when added directly to the oil or water phase.

It is also suggested to add natural preservatives, such as Benzoic Acid or Sorbic Acid, to the emulsion at temperatures below 40 °C. In order to prevent partial crystallization of the organic acids, it is recommended that the necessary amount of Sodium Hydroxide to neutralize those acids is incorporated in the emulsion prior to adding such natural preservatives. After addition of the acids, it is recommended to adjust to a final pH of 5.0 – 5.5. Neutralization of the emulsion is done at approx. 35 °C.

The droplet size of the dispersed oil droplets for emulsions with long-term stability is approx. 1 to 8 µm. More coarsely dispersed emulsions tend to separate.

After processing and cooling down, the viscosity of the system can be still low and can increase particularly during the next 2 days. This is due to a reorganisation process of the stabilizing lamellar structures. Thus, it is recommended to determine the final viscosity of a formula not directly after preparation.

### Recommended usage concentration

2.5 – 4.0% TEGO® Care PBS 6

### Packaging

450 kg EURO pallet (18 x 25 kg carton box)

### Hazardous goods classification

Information concerning

- classification and labelling according to regulations for transport and for dangerous substances
- protective measures for storage and handling
- measures in accidents and fires
- toxicity and ecological effects

is given in our material safety data sheets.

## Guideline Formulations

Sun Care Lotion with insect repellent SPF 50+ SG 40/13-3	
<b>Phase A</b>	
TEGO® Care PBS 6	3.00%
TEGO® Alkanol 18 (Stearyl Alcohol)	0.75%
TEGIN® M Pellets (Glyceryl Stearate)	0.75%
TEGOSOFT® XC (Phenoxyethyl Caprylate)	6.50%
Diethylamino Hydroxybenzoyl Hexyl Benzoate (Uvinul A plus, BASF SE)	10.00%
Ethylhexyl Methoxycinnamate	6.00%
Xanthan Gum (Keltrol CG-SFT, CP Kelco)	0.50%
Ethyl Butylacetylaminopropionate (Insect repellent IR 3535, Merck KGaA)	4.00%
Tocopheryl Acetate	0.50%
<b>Phase B</b>	
Water	46.00%
Glycerin	2.00%
<b>Phase C</b>	
Water	14.20%
Tromethamine	1.80%
Phenylbenzimidazole Sulfonic Acid (Eusolex 232, Merck KGaA)	4.00%
<b>Phase Z</b>	
Preservative*, Perfume	q.s.
<b>Preparation:</b>	
<ol style="list-style-type: none"> <li>Add phase C to phase B and adjust pH of phase B/C to 7.0.</li> <li>Heat phase A and B/C separately to approx. 80 °C.</li> <li>Add phase B/C to phase A without stirring.</li> <li>Homogenize.</li> </ol>	
<sup>1)</sup> Important: If phase A has to be charged into the vessel first, phase B must be added <b>without stirring</b> .	
<b>Remarks:</b>	
Formulation viscosity: 8 Pas (Brookfield RVT, spindle 5, 10 rpm)	
SPF ( <i>in vitro</i> ): 64**	
UVA-Balance: 36%**	
**Labsphere 2000S; 1.0 mg/cm <sup>2</sup> , PMMA slides	
*Formulation was tested with 0.8% Dipropylene Glycol; Methylparaben; Ethylparaben; Aqua; Methylisothiazolinone (Microcare MEM, Thor GmbH)	

Protecting Sun Care Spray SPF 30 F 42/11-1	
<b>Phase A</b>	
TEGO® Care PBS 6	3.00%
TEGIN® M Pellets (Glyceryl Stearate)	0.50%
TEGO® Alkanol 18 (Stearyl Alcohol)	0.50%
TEGOSOFT® XC (Phenoxyethyl Caprylate)	3.20%
<b>Phase B</b>	
Bis-Ethylhexyloxyphenol Methoxyphenyl Triazine (Tinosorb S, BASF SE)	3.00%
Butyl Methoxydibenzoylmethane	2.00%
Ethylhexyl Methoxycinnamate	2.00%
Ethylhexyl Salicylate	4.00%
Octocrylene	4.00%
TEGOSOFT® P (Isopropyl Palmitate)	2.00%
<b>Phase C</b>	
Glycerin	3.00%
Water	60.90%
<b>Phase D</b>	
TEGO® Carbomer 341 ER (Acrylate/C10-30 Alkyl Acrylate Copolymer)	0.20%
TEGOSOFT® XC (Phenoxyethyl Caprylate)	0.80%
<b>Phase E</b>	
Tromethamine (30% aq.)	0.80%
<b>Phase F</b>	
Phenylbenzimidazole Sulfonic Acid (Eusolex 232, Merck KGaA)	2.00%
Tris(hydroxymethyl)aminomethane	0.90%
Water	7.10%
<b>Phase Z</b>	
Preservative*, Perfume	q.s.
<b>Preparation:</b>	
<ol style="list-style-type: none"> <li>Merge components of phase B and heat to 85 °C.</li> <li>Merge phases A and B.</li> <li>Heat phase A/B and C separately to approx. 70 – 75 °C.</li> <li>Add phase A/B to phase C with stirring.<sup>1)</sup></li> <li>Homogenize.</li> <li>Cool with gentle stirring and add phase D below 60 °C and homogenize for a short time.</li> <li>Add phase E at approx. 40 °C and stir well.</li> <li>Adjust pH of formulation to 7.0.</li> <li>Add phase F, stir until uniform and check pH.</li> </ol>	
<sup>1)</sup> Important: If phase A/B has to be charged into the vessel first, phase C must be added <b>without stirring</b> .	
<b>Remarks:</b>	
Formulation viscosity: 5 Pas (Brookfield RVT, spindle 4, 5 rpm)	
SPF: 33.7, UVA-Balance: 35%, CW 373 nm (Calculated values, BASF Sunscreen Simulator)	
*Formulation was tested with 0.8% Dipropylene Glycol; Methylparaben; Ethylparaben; Aqua; Methylisothiazolinone (Microcare MEM, Thor GmbH)	

<b>Sun Care Lotion SPF 50+ with mineral UV filter SG 37/13-1</b>	
<b>Phase A</b>	
TEGO® Care PBS 6	3.00%
TEGO® Alkanol 18 (Stearyl Alcohol)	0.50%
TEGIN® M Pellets (Glyceryl Stearate)	0.50%
TEGOSOFT® XC (Phenoxyethyl Caprylate)	3.00%
TEGO® Sun TDEC 45 (Titanium Dioxide; Diethylhexyl Carbonate; Polyglyceryl-6 Polyhydroxystearate)	11.00%
Butyl Methoxydibenzoylmethane	5.00%
Octocrylene	4.90%
Bis-Ethylhexyloxyphenol Methoxyphenyl Triazine (Tinosorb S, BASF SE)	4.70%
Diethylhexyl Butamido Triazone	3.70%
Ethylhexyl Methoxycinnamate	0.10%
Xanthan Gum (Keltrol CG-SFT, CP Kelco)	0.20%
<b>Phase B</b>	
Water	61.40%
Glycerin	2.00%
<b>Phase Z</b>	
Preservative*, Perfume	q.s.
<b>Preparation:</b>	
<ol style="list-style-type: none"> <li>Heat phase A and B separately to approx. 80 °C.</li> <li>Add phase B to phase A without stirring.</li> <li>Homogenize.</li> </ol>	
<sup>1)</sup> Important: If phase A has to be charged into the vessel first, phase B must be added <b>without stirring</b> .	
<b>Remarks:</b>	
Formulation viscosity: 19 Pas (Brookfield RVT, spindle 4, 5 rpm)	
SPF ( <i>in vitro</i> ): 60**	
UVA-Balance: 34%**	
**Labsphere 2000S; 1.0 mg/cm <sup>2</sup> , PMMA slides	
*Formulation was tested with 0.8% Dipropylene Glycol; Methylparaben; Ethylparaben; Aqua; Methylisothiazolinone (Microcare MEM, Thor GmbH)	

<b>Moisturizing After Sun Lotion FU 12/13-12</b>	
<b>Phase A</b>	
TEGO® Care PBS 6	3.00%
TEGIN® M Pellets (Glyceryl Stearate)	0.35%
TEGO® Alkanol 1618 (Cetearyl Alcohol)	0.65%
Butyrospermum Parkii (Shea) Butter	3.00%
TEGOSOFT® CT (Caprylic/Capric Triglyceride)	5.50%
TEGOSOFT® P (Isopropyl Palmitate)	5.00%
<b>Phase B</b>	
Glycerin	5.00%
Water	36.80%
Triacetin	0.20%
<b>Phase C</b>	
Xanthan Gum (Keltrol CG-SFT, CP Kelco)	0.50%
<b>Phase D</b>	
Urea (50% aq.)	40.00%
<b>Phase Z</b>	
Preservative*, Perfume	q.s.
<b>Preparation:</b>	
<ol style="list-style-type: none"> <li>Heat phase A and B separately to approx. 85 °C.</li> <li>Add phase A to phase B with stirring.<sup>1)</sup></li> <li>Homogenize.</li> <li>Cool with gentle stirring and add phase C below 40 °C.</li> <li>Homogenize for a short time.</li> <li>Cool with gentle stirring and add phase D below 30 °C.</li> <li>Homogenize for a short time.</li> </ol>	
<sup>1)</sup> Important: If phase A has to be charged into the vessel first, phase B must be added <b>without stirring</b> .	
<b>Remarks:</b>	
Emulsion viscosity: 26 Pas (Brookfield RVT, spindle 4, 5 rpm)	
*Formulation was tested with 0.7% Phenoxyethanol (and) Ethylhexylglycerin (Euxyl PE 9010, Schülke & Mayr)	

<b>Natural Make-up Foundation</b> E11-9-1112	
<b>Phase A</b>	
TEGO® Care PBS 6	4.00%
TEGO® Alkanol 1618 (Cetearyl Alcohol)	1.50%
TEGIN® M Pellets (Glyceryl Stearate)	1.50%
TEGOSOFT® MM (Myristyl Myristate)	2.00%
TEGOSOFT® AC (Isoamyl Cocoate)	6.00%
TEGOSOFT® DC (Decyl Cocoate)	7.00%
<b>Phase B</b>	
Water	60.10%
Glycerin	1.00%
<b>Phase C</b>	
Magnesium-Aluminium Silicate (Veegum Ultra, Vanderbilt)	0.80%
Xanthan Gum (Rheocare XG, Azelis)	0.20%
<b>Phase D</b>	
Titanium Dioxide, CI 77891(Kronos 1171, Kronos)	8.00%
Iron Oxide CI 77492 (Sicovit Gelb 10 E, BASF SE)	0.90%
Iron Oxide CI 77491(Sicovit Rot 30E, BASF SE)	0.20%
Iron Oxide CI 77491, CI 77492, CI 77499 (Sicovit Braun 70E, BASF SE)	0.40%
Iron Oxide CI 77499 (Sicovit Schwarz 80E, BASF SE)	0.10%
<b>Phase E</b>	
Glycerin, Aqua, Sod. Laevulinate, Sod. Anisate (Dermosoft 1388 ECO, Dr. Straetmans)	3.50%
Glyceryl Caprylate (Dermosoft GMCY, Dr. Straetmans)	0.30%
Citric Acid (20% aq.)	0.50%
<b>Phase F</b>	
TEGO® Feel Green (Cellulose)	2.00%
<b>Phase Z</b>	
Perfume	q.s.
<b>Preparation:</b>	
<ol style="list-style-type: none"> <li>Heat phase B to 75°C–80°C.</li> <li>Add phase C to B while stirring.</li> <li>Premix phase D and grind until homogenous.</li> <li>Add phases D and E to B/C and homogenize.</li> <li>Heat phase A to 75°C.</li> <li>Add phase A to B/C/D/E with stirring. <sup>1)</sup></li> <li>Homogenize.</li> <li>Cool below 40°C and add phase F.</li> <li>Homogenize for a short time.</li> </ol>	
<sup>1)</sup> Important:	
If phase A has to be charged into the vessel first, phase B/C/D/E must be added <b>without stirring</b> .	
<b>Remarks:</b>	
Emulsion viscosity: 32 Pas (Brookfield DV II, spindle 6, 10rpm)	

<b>Chilling Body Lotion</b> FU 12/13-5	
<b>Phase A</b>	
TEGO® Care PBS 6	3.00%
TEGIN® M Pellets (Glyceryl Stearate)	0.50%
TEGO® Alkanol 18 (Stearyl Alcohol)	0.50%
Prunus Amygdalus Dulcis (Sweet Almond) Oil	5.00%
TEGOSOFT® AC (Isoamyl Cocoate)	5.50%
TEGOSOFT® CT (Caprylic/Capric Triglyceride)	5.50%
<b>Phase B</b>	
Glycerin	4.00%
Water	64.30%
<b>Phase C</b>	
Xanthan Gum (Keltrol CG-SFT, CP Kelco)	0.50%
<b>Phase D</b>	
Sodium Hydroxide (10% aq.)	0.20%
<b>Phase E</b>	
Benzyl Alcohol, Glycerin, Benzoic Acid, Sorbic Acid (Rokonsal BSB-N, ISP)	1.00%
Alcohol	10.00%
<b>Phase Z</b>	
Perfume	q.s.
<b>Preparation:</b>	
<ol style="list-style-type: none"> <li>Heat phase A and B separately to approx. 70 – 75 °C.</li> <li>Add phase A to phase B with stirring.<sup>1)</sup></li> <li>Homogenize.</li> <li>Cool with gentle stirring and add phase C below 40 °C.</li> <li>Homogenize for a short time.</li> <li>Add phase D below 30 °C.</li> <li>Add phase E and adjust pH of formulation to 5.0 – 5.5.</li> </ol>	
<sup>1)</sup> Important:	
If phase A has to be charged into the vessel first, phase B must be added <b>without stirring</b> .	
<b>Remarks:</b>	
Emulsion viscosity: 13 Pas (Brookfield RVT, spindle 4, 5 rpm)	

<b>Moisturizing Lotion based on inverse Processing H 3/12-8</b>	
<b>Phase A</b>	
TEGO® Care PBS 6	3.00%
TEGIN® M Pellets (Glyceryl Stearate)	0.50%
TEGO® Alkanol 18 (Stearyl Alcohol)	0.50%
TEGOSOFT® CT (Caprylic/Capric Triglyceride)	5.50%
TEGOSOFT® OP (Ethylhexyl Palmitate)	5.50%
<b>Phase B</b>	
Glycerin	3.00%
Water	79.50%
<b>Phase C</b>	
Xanthan Gum (Keltrol CG-SFT, CP Kelco)	0.50%
<b>Phase D</b>	
LACTIL® (Sodium Lactate; Sodium PCA; Glycine; Fructose, Urea; Niacinamid; Inositol; Sodium Benzoate, Lactic Acid)	2.00%
<b>Phase Z</b>	
Preservative*, Perfume	q.s.
<b>Preparation:</b>	
1. Heat phase A and B to approx. 75 °C separately.	
2. <b>Add phase B to phase A slowly while stirring.</b>	
3. Homogenize.	
4. Cool with gentle stirring and add phase C below 40 °C.	
5. Homogenize for a short time.	
6. Add phase D and stir until uniform.	
<b>Remarks:</b>	
Formulation viscosity: 23 Pas (Brookfield RVT, spindle C, 10 rpm)	
*Formulation was tested with 0.8% Dipropylene Glycol; Methylparaben; Ethylparaben; Aqua; Methylisothiazolinone (Microcare MEM, Thor GmbH)	

<b>Body Energizing Lotion SZ 9/13-3.2</b>	
<b>Phase A</b>	
TEGO® Care PBS 6	3.00%
TEGO® Alkanol 1618 (Cetearyl Alcohol)	0.50%
TEGOSOFT® CT (Caprylic/Capric Triglyceride)	4.00%
TEGOSOFT® AC (Isoamyl Cocoate)	2.50%
<b>Phase B</b>	
Water	88.20%
TEGO® Cosmo C 100 (Creatine)	0.50%
TEGO® Carbomer 140 (Carbomer)	0.10%
TEGO® Carbomer 141 (Carbomer)	0.10%
Xanthan Gum (Keltrol CG-SFT, CP Kelco)	0.50%
<b>Phase C</b>	
Sodium Hydroxide (10 % aq.)	0.60%
<b>Phase Z</b>	
Preservative*, Perfume	q.s.
<b>Preparation:</b>	
1. Heat phase A separately to approx. 75 °C.	
2. Disperse powders in phase B until uniform and heat to approx. 75 °C.	
3. Add phase A to phase B with stirring. <sup>1)</sup>	
4. Homogenize.	
5. Cool with gentle stirring and add phase C below 40 °C.	
6. Homogenize for a short time.	
<sup>1)</sup> Important:	
If phase A has to be charged into the vessel first, phase B must be added <b>without stirring</b> .	
<b>Remarks:</b>	
Formulation viscosity: 15 Pas (Brookfield RVT, spindle 5, 10 rpm)	
*Formulation was tested with 0.7% Phenoxyethanol (and) Ethylhexylglycerin (Euxyl PE 9010, Schülke & Mayr)	

B 11/13

This information and all further technical advice is based on our present knowledge and experience. However, it implies no liability or other legal responsibility on our part, including with regard to existing third party intellectual property rights, especially patent rights. In particular, no warranty, whether express or implied, or guarantee of product properties in the legal sense is intended or implied. We reserve the right to make any changes according to technological progress or further developments.

The customer is not released from the obligation to conduct careful inspection and testing of incoming goods. Performance of the product described herein should be verified by testing, which should be carried out only by qualified experts in the sole responsibility of a customer. Reference to trade names used by other companies is neither a recommendation, nor does it imply that similar products could not be used.

(Status: April, 2008)

**Evonik Industries AG** Goldschmidtstraße 100 45127 Essen, Germany  
P.O. BOX 45116 Essen PHONE +49 201 173-2854 FAX +49 201 173-1828  
personal-care@evonik.com www.evonik.com/personal-care

